

## DISABLING THE YAESU WIRES™ FUNCTION

**FT-8800 / FT-8900** – See manual page 50 or 48

1. Press the **SET** key momentarily to enter the set mode.
2. Rotate the *Main* band **Dial** knob to select menu 15 – **DTMF W.**
3. Press the *Main* band **Dial** knob momentarily then rotate the *Main* band **Dial** knob to select a memory (**d1** through **d16**) that is empty, i.e. it contains **••••••** (six dots) = no tone.
4. Press the *Main* band **Dial** knob momentarily to store the setting.
5. Rotate the *Main* band **Dial** knob to select menu 17 – **INET.**
6. Press the *Main* band **Dial** knob momentarily then rotate the *Main* band **Dial** knob to select **INT.MEM.**
7. Press the *Main* band **Dial** knob for ½ second to store the setting and exit the menu mode.
8. Rotate the *Main* band **Dial** while pressing and holding the left **VOL** knob to select the same memory selected in step 3 above.